


Installation examples for fixings:  
 Exemples de pose des vis :  
**FVO, FV, FVI**

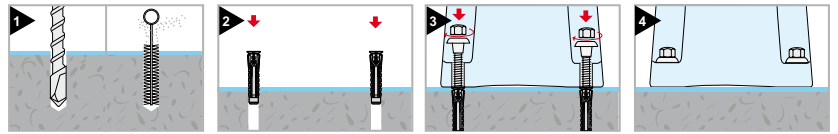

## FVO

**Vertical WC fixing**  
 Fixation verticale WC



**Nylon plug, white zinc plated brass studscrew nickel plated brass cap nut**

Cheville nylon, goujon laiton zingué blanc  
 écrou borgne laiton nickelé

Code	Plug Cheville Ø x L	Screw Vis Ø x L	Pkg.	Pkg./ Outerbox Cond.
61500005080	8x40	M5x80	4	50
61500006080	10x50	M6x80	4	50

## FV

**Vertical WC fixing**  
 Fixation verticale WC



**Nylon plug, white zinc plated studscrew nickel plated brass cap nut**

Cheville nylon, goujon zingué blanc  
 écrou borgne laiton nickelé

Code	Plug Cheville Ø x L	Screw Vis Ø x L	Pkg.	Pkg./ Outerbox Cond.
61506b05080	8x40	M5x80	4	50
61506b06080	10x50	M6x80	4	50

## FVI

**Vertical WC fixing**  
 Fixation verticale WC



**Nylon plug, stainless steel studscrew nickel plated brass cap nut**

Cheville nylon, goujon en inox  
 écrou borgne laiton nickelé

Code	Plug Cheville Ø x L	Screw Vis Ø x L	Pkg.	Pkg./ Outerbox Cond.
61556005080	8x40	M5x80	4	50
61556006080	10x50	M6x80	4	50